

POWER LINK

Zeus & Neptune

USER'S MANUAL



CATALOG

 
A. Game Picture.....	2
B. Machine Connection Introduction	3
C. System Setting.....	4
1. LAST RECORD:.....	4
2. BUSINESS RECORD:.....	5
3. IN-OUT RECORD:.....	5
4. VOLUME:	6
5. LANGUAGE:.....	6
6. KEY TEST:.....	6
7. ADVANCED:.....	7
a. MAIN GAME RECORD :	8
b. GAME ACTIVE:	8
c. SYSTEM SETUP :	9
d. JACKPOT SETUP:	10
e. BILL ACCEPTOR SETUP:	10
f. PROBABILITY SETUP:	11
g. TIME SETUP:	11
h. CHANGE PASSWORD:	11
i. CLEAR DATA:	12
j. MACHINE ID SETUP:	12
k. METER:	12
8. DECODE:	13
9. MAINBOARD:.....	13
D. Check Accounting	14
E. Buttons.....	14
F. Diagram	15

A. Game Picture




B. Machine Connection Introduction

1. This server board can support 1~50 machine connection. It needs to buy a server board, which support the animation on the big screen.
2. The server board is connecting to the hub by network line; other boards (ID board 1~50) use network line to link to hub.
3. Server board can change the settings of every single ID board.
4. Server can check total accounting and every single ID machine's accounting.

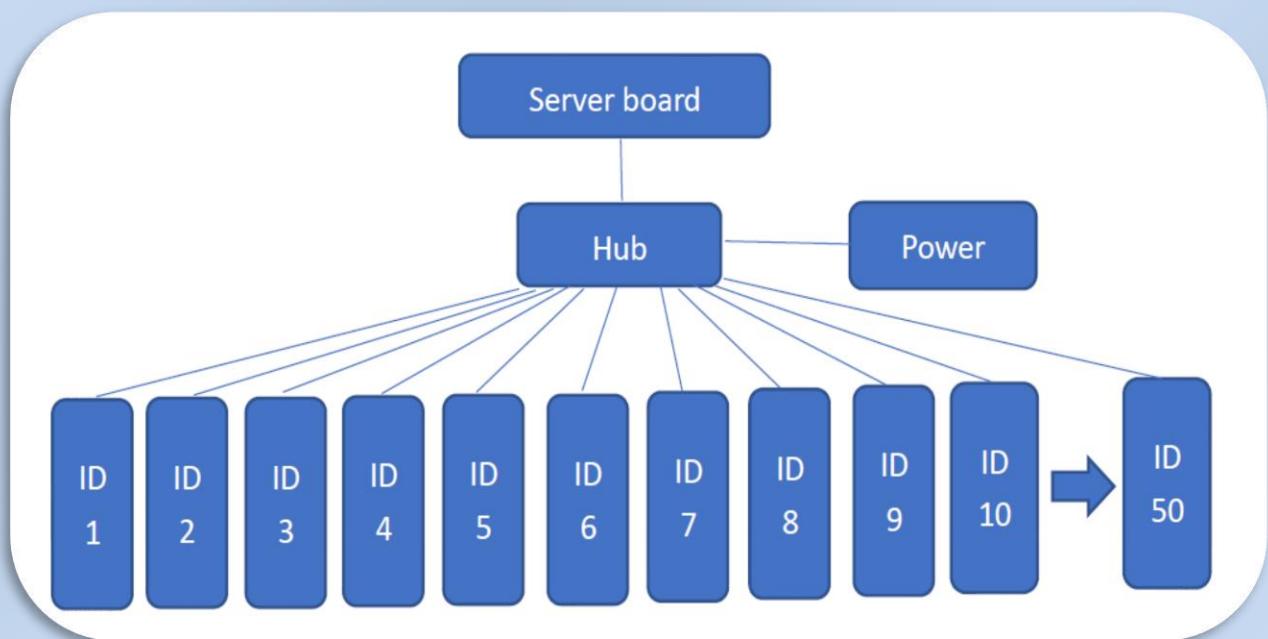

C. System Setting

 Press **【Setting SW (20A)】** to enter MENU and use these function for **【BET1】** Previous **【BET2】** Next **【AUTO】** Select **【START】** Return.

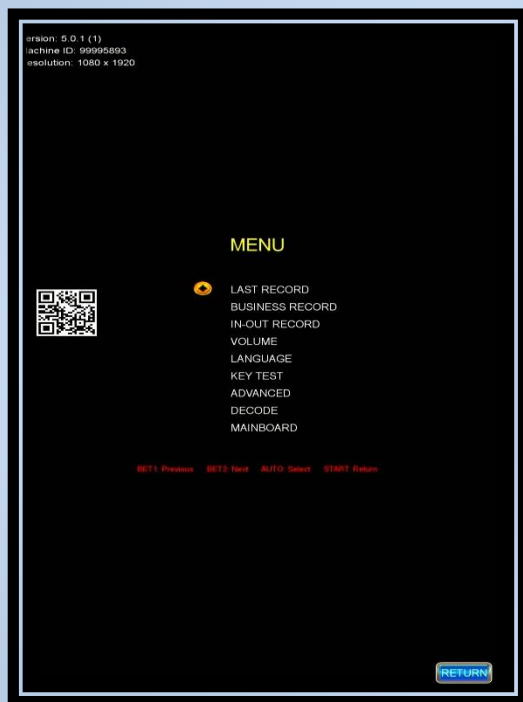

1. LAST RECORD:

The last 100 results will be reserved here.



2. BUSINESS RECORD:

To check every data including “all in, all out, all play in, all play out, play count, win count”.

Push **【AUTO】** to shift it as last record then current record back to zero.

BUSINESS RECORD		
	Current record 2017/09/03 08:38:02	Last record 2017/09/03 08:38:10
ALL IN	\$0.00	\$-15000.00
ALL OUT	\$0.00	\$0.00
PERCENT	0.00%	0.00%
ALL PLAY IN	\$0.00	\$101364.00
ALL PLAY OUT	\$0.00	\$83824.26
PERCENT	0.00%	92.66%
PLAY COUNT	0	10884
WIN COUNT	0	8652
PERCENT	0.00%	47.69%
AUTO: Shift START: Redman		
Shift RETURN		


3. IN-OUT RECORD:

To check the time record of key in, key out, coin in, coin out, bill in, bill out.

IN-OUT RECORD			
KEY IN	\$5000.00	2017/05/01	07:08:46
KEY IN	\$4700.00	2017/04/30	15:52:14
KEY IN	\$500.00	2017/04/30	15:40:03
KEY IN	\$5000.00	2017/04/30	10:44:36
KEY IN	\$100.00	2017/04/30	10:43:44
KEY IN	\$1100.00	2017/04/30	06:34:11
KEY IN	\$2800.00	2017/04/29	16:37:59
KEY IN	\$1300.00	2017/04/29	12:03:46
KEY IN	\$5000.00	2017/04/29	07:09:44
KEY IN	\$4800.00	2017/04/29	07:08:55
KEY IN	\$100.00	2017/04/29	07:08:27
KEY IN	\$100.00	2017/04/28	15:38:08
KEY IN	\$100.00	2017/04/28	15:38:06
KEY IN	\$1000.00	2017/04/28	15:19:28
KEY IN	\$2800.00	2017/04/28	15:19:10
KEY IN	\$3000.00	2017/04/28	12:23:13
(1/3)			
AUTO: Page: START: Return			


4. VOLUME:

 Push 【BET3】、【BET4】 to adjust the volume

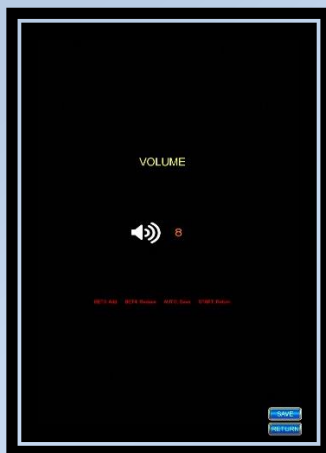

5. LANGUAGE:

 English (Simplified Chinese is only allowed to show while setting.)

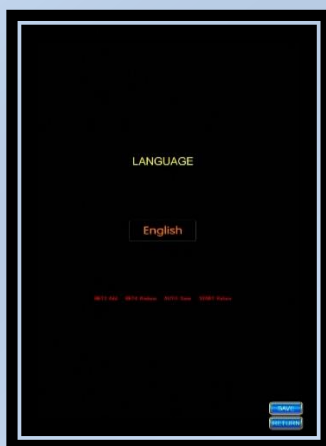

6. KEY TEST:

To test the machine button is working or not.



Press 【AUTO】 + 【START】 return to MENU.

7. ADVANCED:

It manages by two different levels.

 
- Level 1 (Code is 11111111):

For technical staff to check the record and adjust some basic functions.

- Level 2 (Code is 22222222):

It's for operators to adjust all functions.

Wrong password for 5 times continuously, 10 minutes later to rekey in the password.

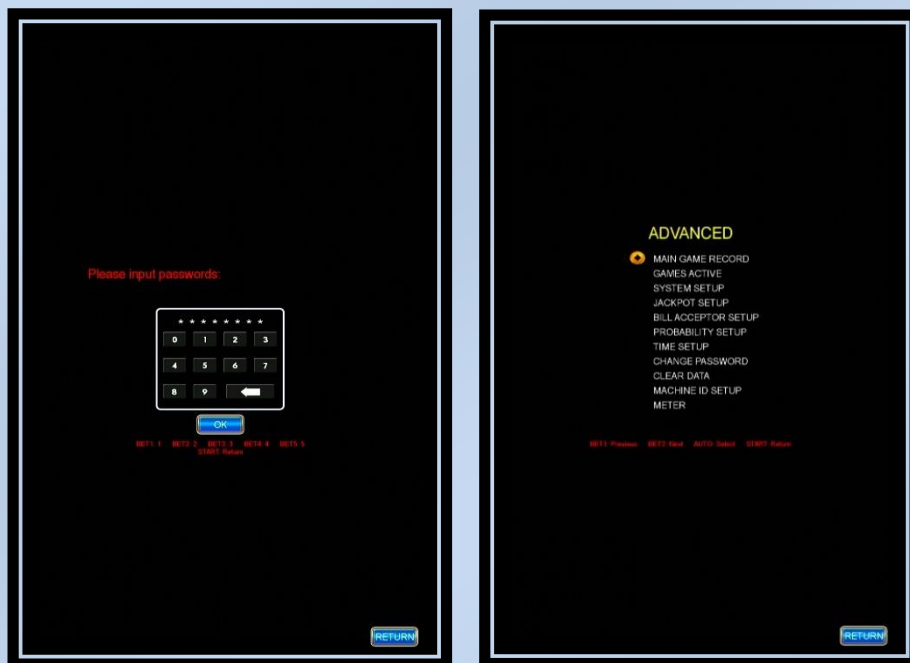

In this stage, we also like to explain each of the functions as below.

a. MAIN GAME RECORD :

To check the accounting data.

MAIN GAME RECORD			
CORN IN	\$9.00	CORN OUT	\$0.00
KEY IN	\$10000.00	KEY OUT	\$0.00
BILL IN	\$0.00	TICKET	\$0.00
ALL IN	\$10000.00	WIN	\$15000.00
ALL OUT	\$0.00	PERCENT	0.00%
ALL PLAY IN	\$101362.00	PERCENT	60.60%
ALL PLAY OUT	\$03930.66		
PLAY COUNT	16897	PERCENT	47.00%
WIN COUNT	8084		
FREE GAME COUNT	106	FREE GAME WIN	\$24332.00
BONUS GAME COUNT	98	BONUS GAME WIN	\$25035.44
MEGA JP COUNT	1	MEGA JP WIN	\$6000.44
MAJOR JP COUNT	4	MAJOR JP WIN	\$2004.00
MINOR JP COUNT	33	MINOR JP WIN	\$1050.00
MM JP COUNT	73	MM JP WIN	\$1005.00
00001 Return			
RETURN			


b. GAME ACTIVE:

You could choose the game you like.

GAMES ACTIVE	
Zoro	ON
Neptune	ON
0011 Neptune 0012 Neos 0013 Zeus 0014 Ark 0015 Poseidon 0016 Return	
SAVE	
RETURN	

c. SYSTEM SETUP :

 Press **【BET3】** **【BET4】** to adjust each parameter and **【AUTO】** to save.

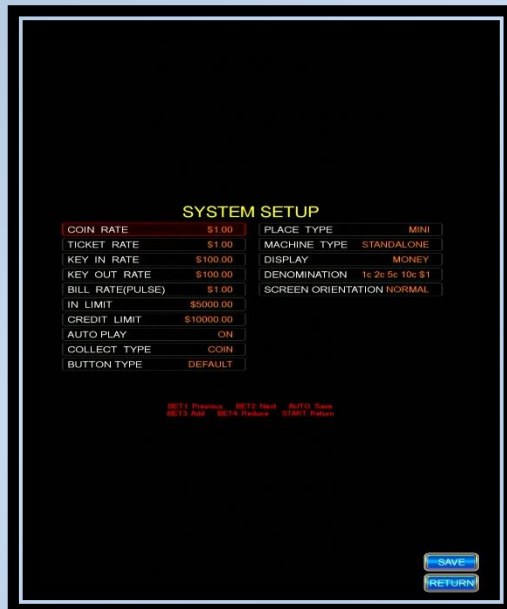

Here are the setting parameters of each option in SYSTEM SETUP stage.

Project	Setting Option	Default
COIN RATE	\$0.01 ~ \$10000.00	\$1.00
TICKET RATE	\$0.01 ~ \$10000.00	\$1.00
KEY IN RATE	\$0.01 ~ \$10000.00	\$100.00
KEY OUT RATE	\$0.01 ~ \$10000.00	\$100.00
BILL RATE(PULSE)	\$0.01 ~ \$10000.00	\$1.00
IN LIMIT	\$100.00 ~ \$8000.00	\$5000.00
CREDIT LIMIT	\$200.00 ~ \$100000.00	\$10000.00
AUTO PLAY	ON, OFF	ON
COLLECT TYPE	COIN, TICKET, PRINTER, null	COIN
BUTTON TYPE	DEFAULT, WIRING A, WIRING B, WIRING C	DEFAULT
PLACE TYPE	LARGE, MIDDLE, MINI	MINI
MACHINE TYPE	STANDALONE , LINK	STANDALONE
DISPLAY TYPE	MONEY, CREDIT	MONEY
DENOMINATION	1c, 2c, 5c, 10C, \$1	1c, 2c, 5c, 10c, \$1
SCREEN ORIENTATION	NORMAL REVERSE	NORMAL

d. JACKPOT SETUP:

JACKPOT SETUP

MEGA JP BASE	\$5000.00
MAJOR JP BASE	\$500.00
MEGA JP CONT %	1.0%
MAJOR JP CONT %	1.0%

ME711 Promax ME712 Next ME713 Super
ME714 Max ME715 Indus ME716 Kiosk

SAVE RETURN

Project	Setting Option	Default
MEGA JP BASE	\$1000.00~\$100000.00	\$5000.00
MAJOR JP BASE	\$100.00~\$10000.00	\$500.00
MEGA JP CONT%	0.1%~2.5%	0.6%
MAJOR JP CONT %	0.1%~2.5%	0.8%

e. BILL ACCEPTOR SETUP:

You may set up from Channel1 to 8. Four types: ICT, JCM, ITL, MEI and Bill Rate: \$0.01~\$10000.00

BILL ACCEPTOR SETUP


Channel 1	1
Channel 2	5
Channel 3	10
Channel 4	20
Channel 5	50
Channel 6	100
Channel 7	Reject
Channel 8	Reject
Bill Rate	\$1.00
Bill Acceptor Type	ICT

ME711 Promax ME712 Next ME713 Super
ME714 Max ME715 Indus ME716 Kiosk

SAVE RETURN

f. PROBABILITY SETUP:

 Push **【BET3】**、**【BET4】** to adjust. Probability from 85% ~ 99.5%, default is 98%.

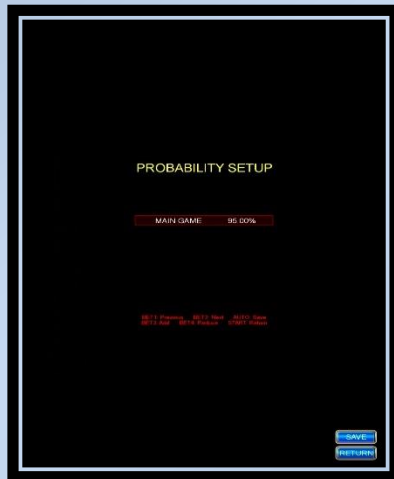


g. TIME SETUP:

Follow function key to set up current time (yyyy / mm / dd hh : mm : ss), press **[AUTO]** to save.




h. CHANGE PASSWORD:

 Manager can change their password here.

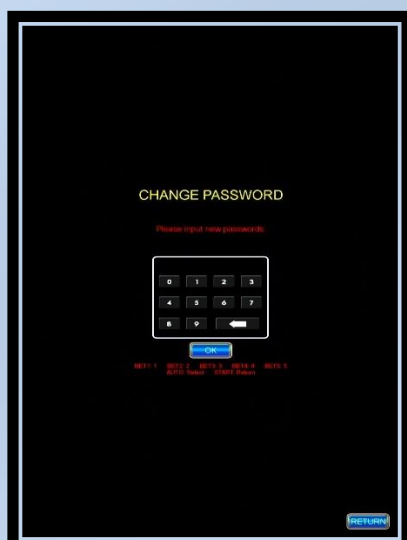


i. CLEAR DATA:

 Press and hold 【AUTO】 3 seconds to clear all accounting data.

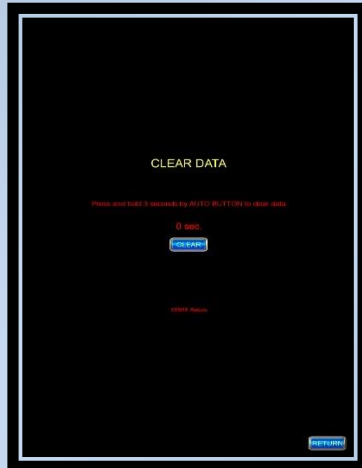

j. MACHINE ID SETUP:

 Set up Machine ID from number 1 to 50

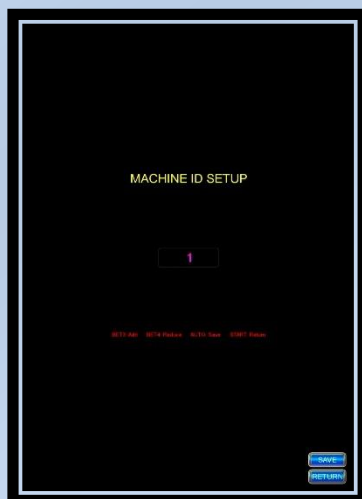

k. METER:

You may set up necessary meters here (coin, bill, key in, key out)



 
8. DECODE:

If you have any questions, you may need to code, please provide this page to contact us.



9. MAINBOARD:

Only VGA1 can be used for vertical game

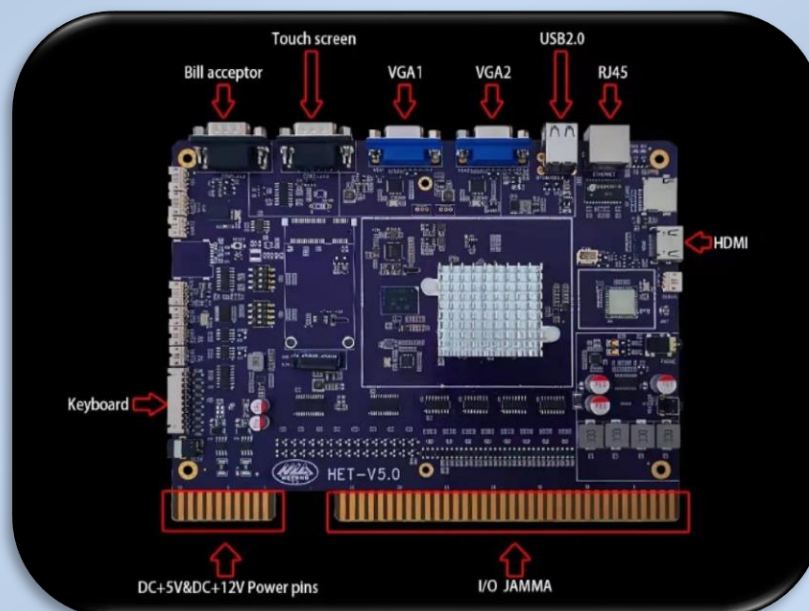


Bill acceptor: ICT-NBA (Pulse) or RS232 port / Printer: GP58 (Pulse) / Touch Panel: 3M compatible (RS232) or USB infrared touch panel.

D. Check Accounting

Press the check button(B20) to check the machine's business records, and press it again to check the winning record.



 E. Buttons

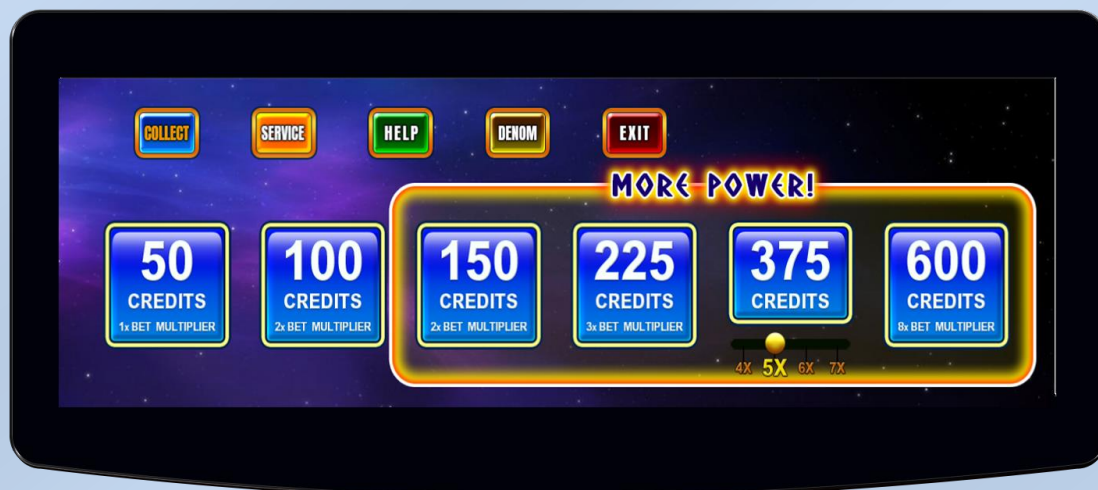

F. Diagram

36 PIN Connector Diagram

Component Side	Pin	Solder Side
	1	
Left Speaker (+)	2	Left Speaker (-)
Right Speaker (+)	3	Right Speaker (-)
Bet 1 Button (To Menu)	4	
Bet 2 Button (Select 1c)	5	
Bet 3 Button (Select 5c)	6	
Bet 4 Button (Select 10c)	7	
	8	
Start/All Stop/Take Win Button	9	
Bet 5 Button (Bet / Select \$1)	10	Error Lamp
Auto Button	11	
DENOM Button	12	Service Lamp
Help Button	13	
	14	
	15	Service Button
	16	
Bill Acceptor	17	
Coin in SW	18	Key In SW
	19	Ticket Out SW
Setting SW	20	Check Accounting SW
Pay Out Button	21	Key Out SW
	22	Coin Out SW
	23	
Key In Counter	24	
Bill In Counter	25	
Coin In Counter	26	Ticket Out SSR
Pay Out Counter	27	
Key Out Counter	28	Lamp: Big Win
Lamp: Start/All Stop/Take Win	29	Lamp: Bet 1
Lamp: Bet 5	30	Lamp: Bet 2
Lamp: Auto	31	Lamp: Bet 3
Lamp: DENOM	32	Lamp: Bet 4
Lamp: Help	33	
	34	Lamp: Pay Out
NC	35	NC
GND	36	GND

10 PIN Connector Diagram

Component Side	Pin	Solder Side
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
	6	
Hopper SSR	7	
	8	
GND	9	GND
GND	10	GND