

# INSTALLATION

## APOLLO

All rights reserved!

Casino Technology AD may alter any part of this manual without prior notification.

	<b>6609 APOLLO</b>	
	7 Kukush Str. Sofia 1309, Bulgaria, tel: +359 2 8129328; fax: +359 2 8129440 <a href="http://www.casino-technology.com">www.casino-technology.com</a>	


## Contents

1. Unpacking .....	3
Positioning .....	4
Connecting to the power supply.....	5

## 1. Unpacking

**CAUTION! FOR TRANSPORTATION ONLY! THE TOP LAMP LOCATED ON THE TOP OF THE CABINET IS NOT ASSEMBLED.**

- Check the external packaging for damages during transportation!
- Remove the packing material, used for protection.
- Check the machine for missing and or damaged components (please refer to fig. 1)
- Open and remove the glasses and the lower door then check for the availability of the following:
- Loosened assembly
- Disconnected connectors
- In case of any nonconformances, please immediately inform our local representative. For more information about warranty conditions and obligations, please refer to Warranty Information and Compliance.

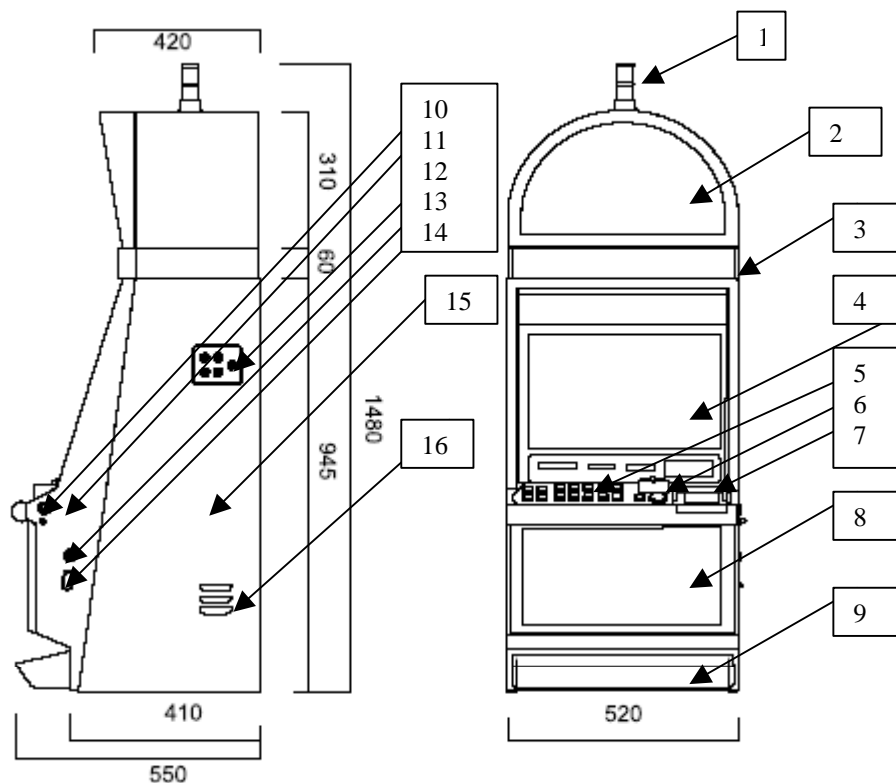

- |                                |                            |
|--------------------------------|----------------------------|
| 1 – Tower lamp                 | 9 – Payout tray            |
| 2 – Head box                   | 10 – Belly Glass lock      |
| 3 – Top box                    | 11 – Belly Glass knob      |
| 4 – Monitor                    | 12 – Service locks (5 pcs) |
| 5 – Operating pushbuttons deck | 13 – Door lock             |
| 6 – Coin IN                    | 14 – Doorknob              |
| 7 – Bill Acceptor              | 15 – Metal case            |
| 8 – Belly Glass panel          | 16 – Ventilation grille    |

Fig. 1 General view of machine

## Positioning

NOTE: Before starting please refer to the Safety Manual, Handling safety requirements.

- Check that the equipment is in the correct position (upright);
- Through the hole at the base of the machine take out the power cord.
- The equipment base should be tightly assembled to the stand using the supplied supporting elements. Dimensions of the cabinet base are given in fig. 2 below

**CAUTION! Do not open the door before fixing the equipment onto the stand! The machine will fall down!**

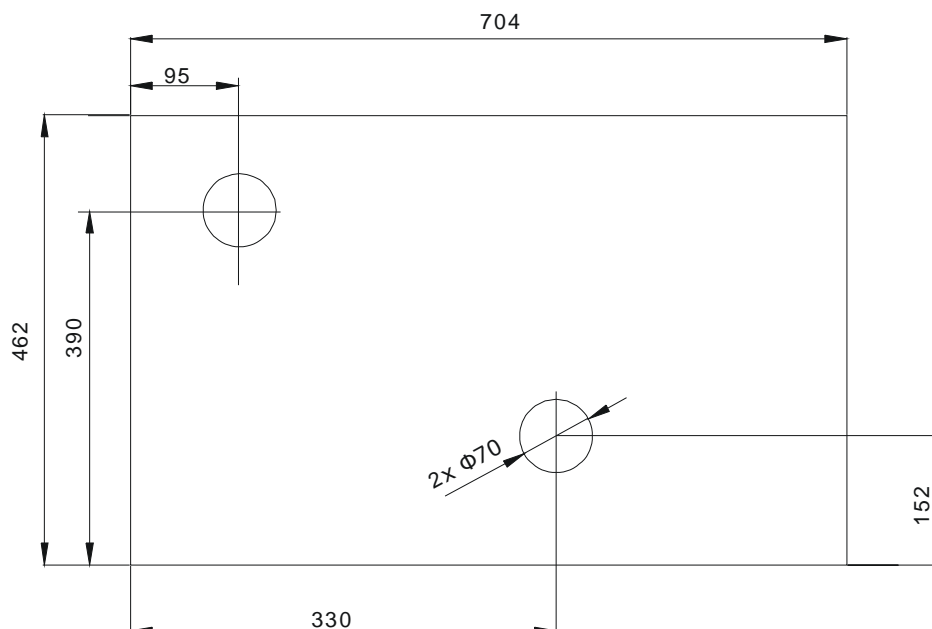


Fig 2. Dimensions of 6609 cabinet footprint. (All dimensions are given in mm!)

	<b>6609 APOLLO</b>	
	7 Kukush Str. Sofia 1309, Bulgaria, tel: +359 2 8129328; fax: +359 2 8129440 <a href="http://www.casino-technology.com">www.casino-technology.com</a>	

## Connecting to the power supply

NOTE: Before starting please refer to the Safety Manual, Electrical safety requirements.

- The Mains voltage of 100-240 VAC, 50 /60 Hz should be used for the machine supply.
- Three-wire - (Live), (Neutral) and Protective Ground (Protective) , at least 3x1.5 mm<sup>2</sup> cross section cord to be used for machine powering.

**CAUTION! AVOID SWITCHING THE MACHINE INTO ELECTRICAL NETWORK WHERE POWERFUL ENGINES, AC MOTORS, WELDING MACHINES, ETC. ARE CONNECTED**