

START

**CASHLINE** 

HI(!)BILITY


PERIPHERALS

**APPLICATION** 

## **How to identify A-Level & B-Level software**

The naming of the Base Software EPROMs (U5 & U6) indicates the software level (major version) and jurisdiction. The Base Software naming is printed on the EPROM label or can be viewed within Service-and Audit Menu / Machine Information.



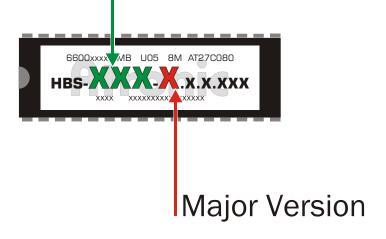

Jurisdiction Specifier

STD = Standard Software

USA = USA Software

Major Version

<5 = A-Level

≥5 = B-Level



www.atronic.com